
Installation Instructions for a Hook/Knob Using a Double-Threaded Stud

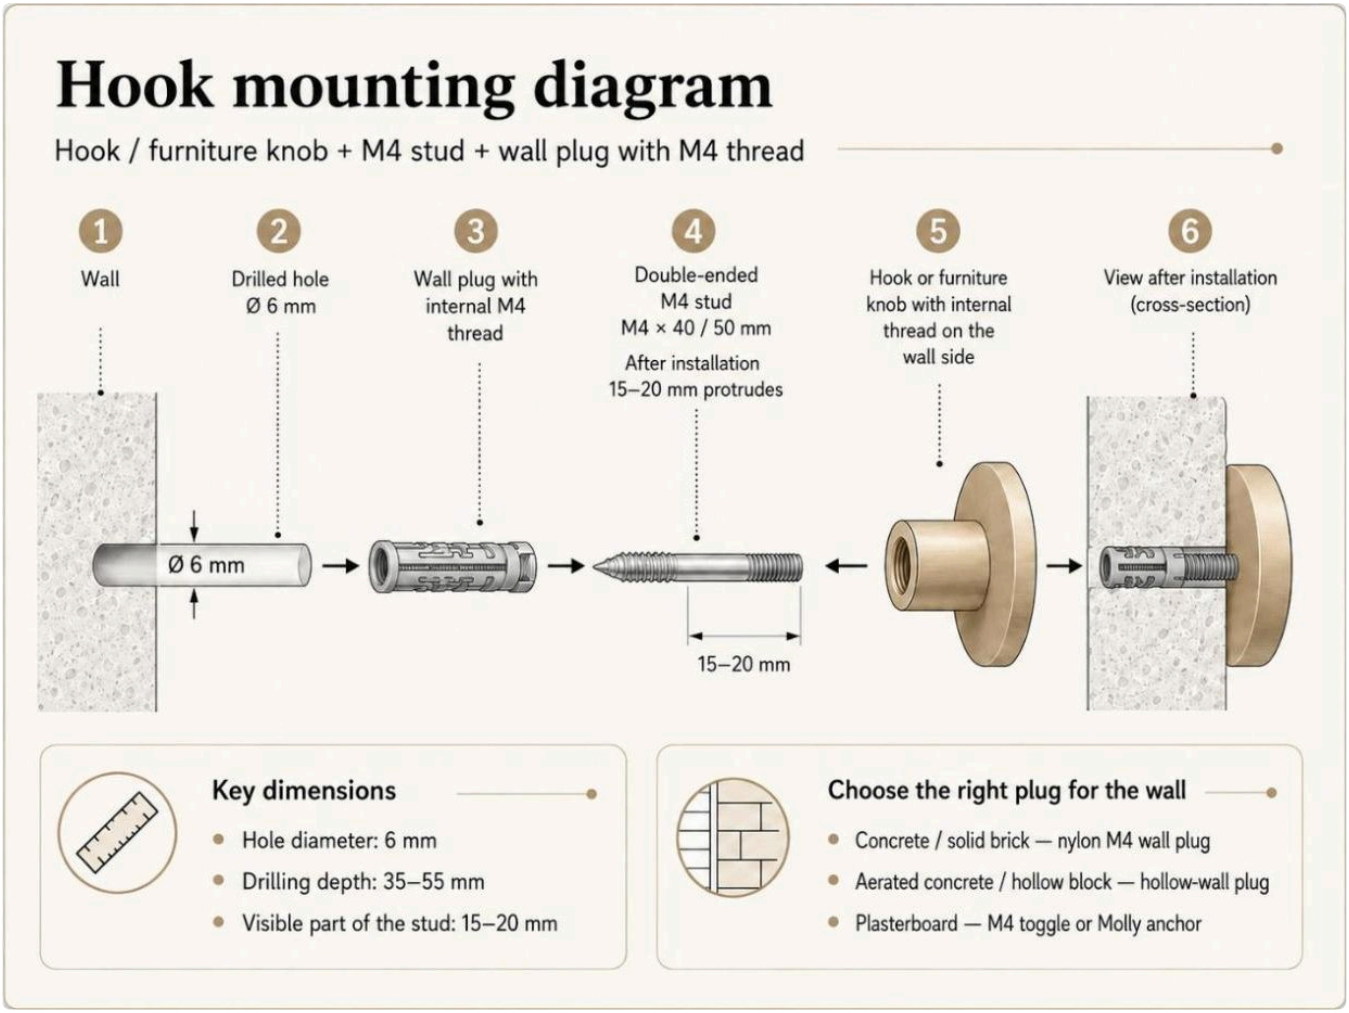

What You Need

- Hook or furniture knob (through hole with M4 thread in the base)
- Double-threaded stud M4 × 40 mm / 50 mm (length 40 mm / 50 mm):
  https://scandinavian-handles.com/en_GB/p/Double-thread-pin-M4-40-for-hangers/5609
  https://scandinavian-handles.com/en_GB/p/M4-50-double-threaded-pin-for-hangers/20160
- Expansion plug with internal M4 thread (e.g. nylon M4 plug for concrete/brick)
- Drill, 6 mm masonry drill bit (standard for M4 plug), hammer, spirit level, pencil, measuring tape.

Installation Instructions

1. Mark the Mounting Location

- Mark the mounting location. Typical height is about 160–175 cm from the floor to the bottom edge of the hook (adjust according to household members' height).
- Hold the hook against the wall, check with a spirit level and mark the centre of the mounting hole with a pencil.

2. Drill the Hole

- Drill a 6 mm hole to a depth of about 35–55 mm (for M4 plug).
- Clean the hole from dust (vacuum/blow out).

3. Insert the M4 Threaded Plug

- Tap the M4 expansion plug into the hole (light hammer taps).
- Screw the M4 × 40 / 50 double-threaded stud into it (sharp end) so that about 15–20 mm protrudes from the wall (the rest is inside the plug).

4. Attach the Hook to the Stud

- Slide the hook onto the protruding stud through the hole in the base.
- If the set includes a decorative nut/cover – place it on the stud on the outside of the hook.

5. Tighten and Level

- Gently tighten the hook until it is stable and does not rotate.
- Check with a spirit level; if uneven – loosen, adjust and tighten again.
- Do not overtighten (plaster/wood may crack if excessive force is used).

Plug Selection for the Surface

- **Concrete / Solid Brick:** nylon M4 plug (6 mm drill bit).
- **Aerated Concrete / Hollow Brick:** hollow wall plug (e.g. "GB" type) with M4 thread.
- **Plasterboard:** "butterfly" type M4 plug, Molly plug or profile mounting (then the stud is screwed into the profile).

Online version: https://pomoc.skandynawskieuchwyty.pl/hc/en-150/articles/50240501516817

Wall mounting of a hook / furniture knob

Step-by-step instructions

1 What you need



1. Hook or furniture knob (internal thread on the wall side)



2. Double-ended M4 stud M4 × 40 mm / 50 mm (pointed on one side)



3. Wall plug with internal M4 thread




4. Drill, 6 mm masonry bit, hammer, spirit level, pencil, tape measure

2 Step-by-step installation

1 Mark the mounting spot

Mark the mounting point. Typical height: 160–175 cm from the floor. Check the level with a spirit level.

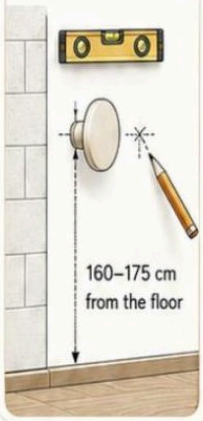


2 Drill the hole

Drill a 6 mm hole to a depth of 35–55 mm and remove the dust.




3 Install the plug and stud

Tap in the M4 plug. Screw the M4 × 40 / 50 mm stud into the plug with the pointed end first so that 15–20 mm protrudes.

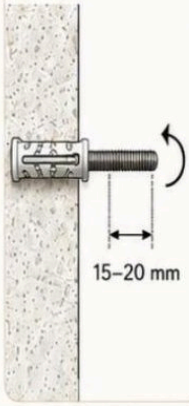

4 Screw on the hook

Screw the hook or knob onto the protruding stud using the internal thread on the wall side.

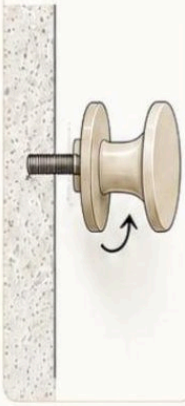


5 Tighten and level

Gently tighten and check the level. Do not overtighten.



3 Choosing the right plug for the substrate

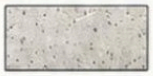	Concrete / solid brick — nylon M4 wall plug, 6 mm drill bit	
	Aerated concrete / hollow block — hollow-wall plug with M4 thread	
	Plasterboard — M4 toggle or Molly anchor	

Note: choose the fixing according to the wall type and the weight of the hook.